


COMPONENTES:

- 2 Laterales externos texturados con refractarios
- 1 Espalda refractaria.
- 1 Piso refractario.
- 1 Parrilla de hierro cromado o herraje de chapa enlozada ángulo (1 bastidor + 2 módulos enlozados + 1 grasera enlozada).
- 2 Grampas superiores.
- 4 Tornillos con tuercas y arandelas.
- 1 varilla roscada con tuercas y arandelas de 1/4".

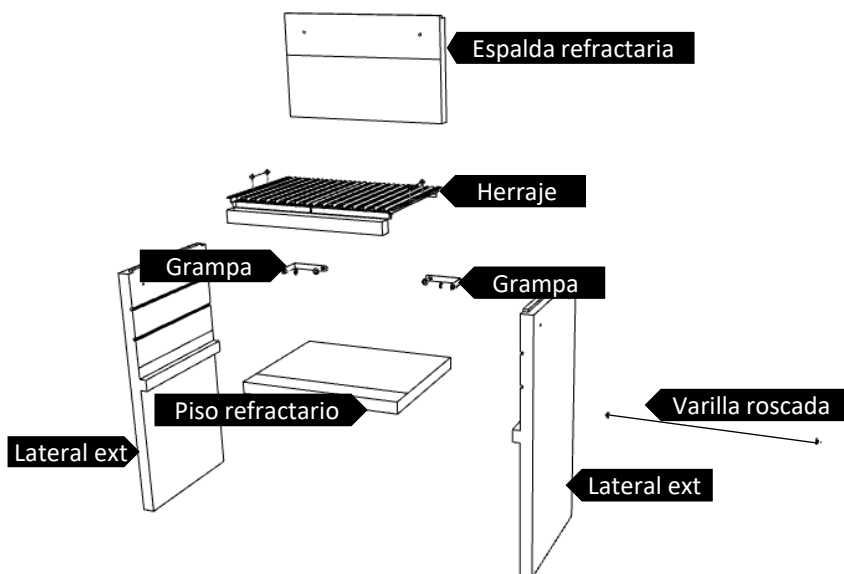


PASO A PASO PARA INSTALACIÓN:

ACONDICIONAMIENTO Y PREPARATIVOS:


Definir claramente la ubicación donde se va a instalar la parrilla. La misma se debe instalar sobre un piso firme y resistente, que no ceda por el peso de su estructura. La zona donde se va a realizar la instalación debe estar limpia y ordenada.

PASO 1 : Posicionar laterales externos + piso + varilla roscada, nivelar y escuadrar conjunto. Armar todo el conjunto parado en el piso, acercar a la pared (si la hubiera) y una vez posicionado en el lugar a instalar, nivelar, escuadrar y ajustar todo el conjunto.



Nota: el fogón es autoportante, no requiere apoyo contra una pared.

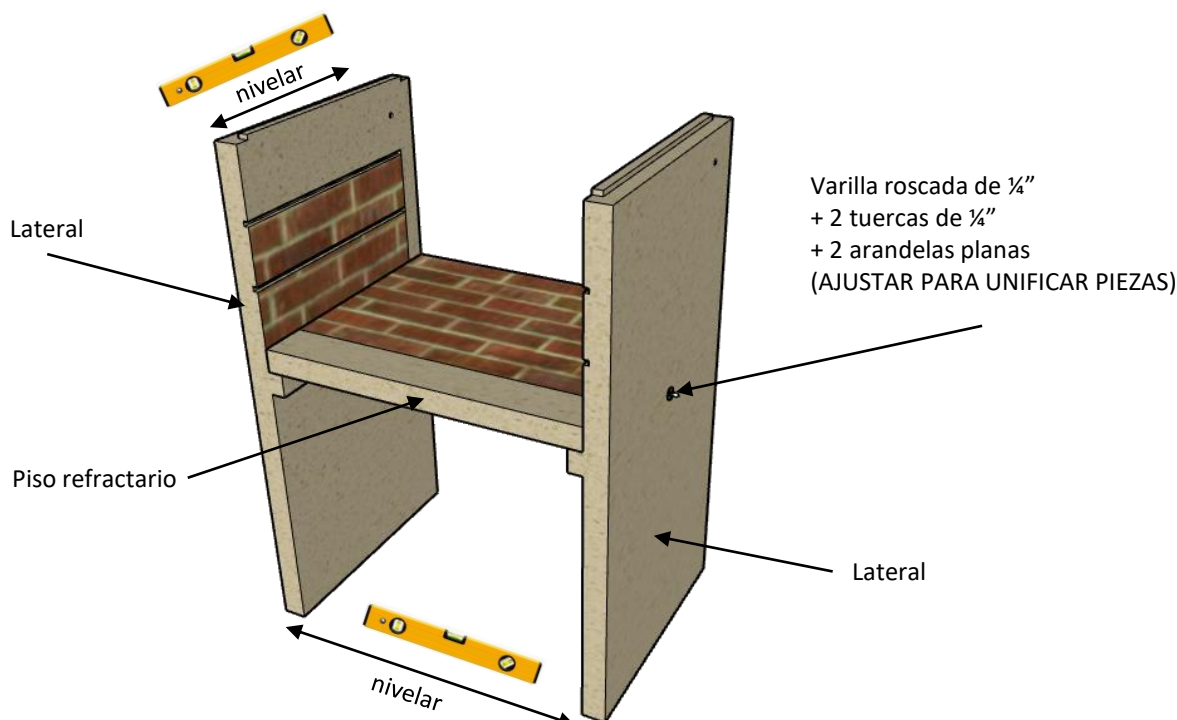

PASO 2 : Colocar espalda refractaria + grampas + tornillos. Insertar la espalda refractaria desde arriba y sujetarla con las grampas metálicas, los tornillos, tuercas y arandelas. Ajustar todo el conjunto.

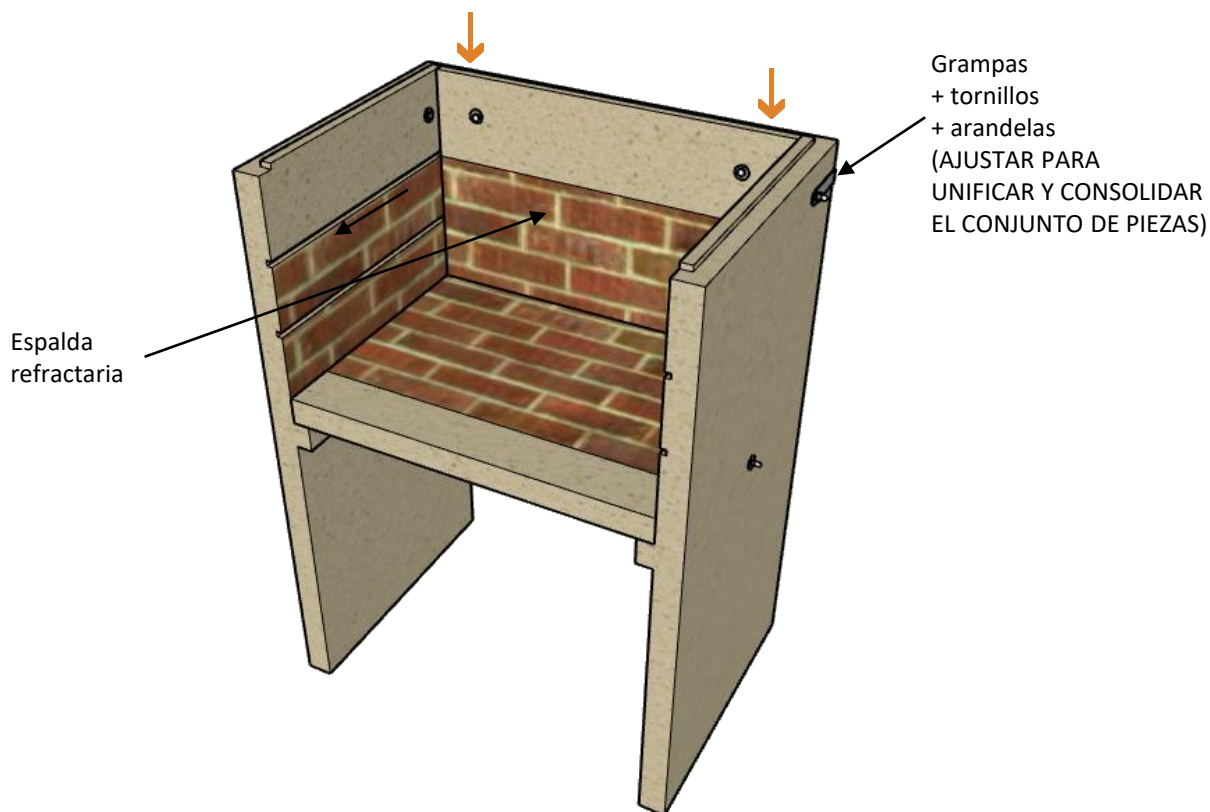

PASO 3 : Colocar herraje. Desde el frente del fogón, colocar el herraje dentro de la guía superior o inferior (de acuerdo al nivel de cocción deseado). Estas guías sirven tanto para el herraje enlozado como para el cromado.

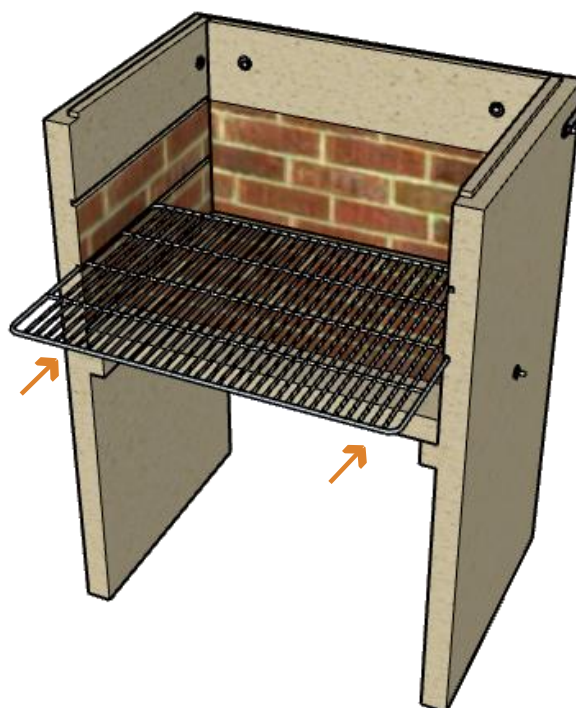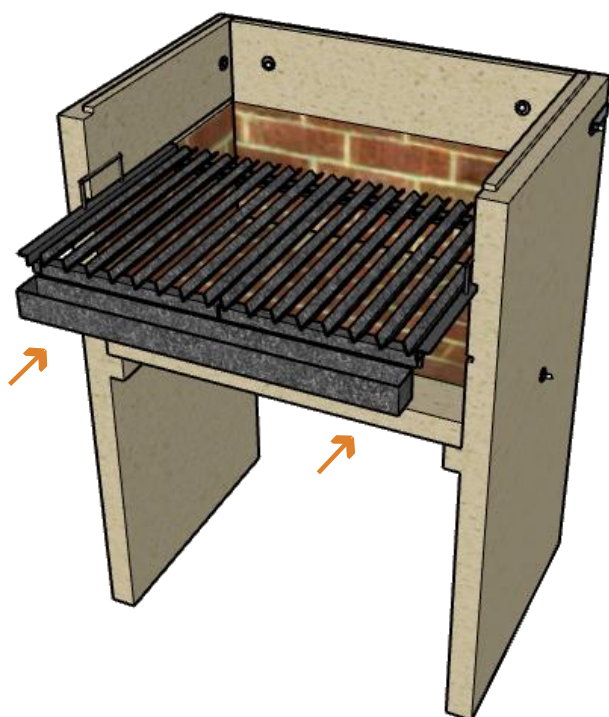



FOGON CLASICO



**FOGON CLÁSICO
CON HERRAJE ENLOZADO
TERMINADO**



**FOGON CLÁSICO
CON HERRAJE CROMADO
TERMINADO**

**Enlace para descarga
de manual del
usuario completo**






FOGON CLASICO



COMPONENTS:

- 2 External textured sides with refractory.
- 1 Refractory floor.
- 1 Refractory back.
- 1 Chrome grill or enameled iron grill (as appropriate).
- 2 Upper clamps.
- 4 Screws with nuts and washers.
- 1 threaded rod with 1/4" nuts and washers.

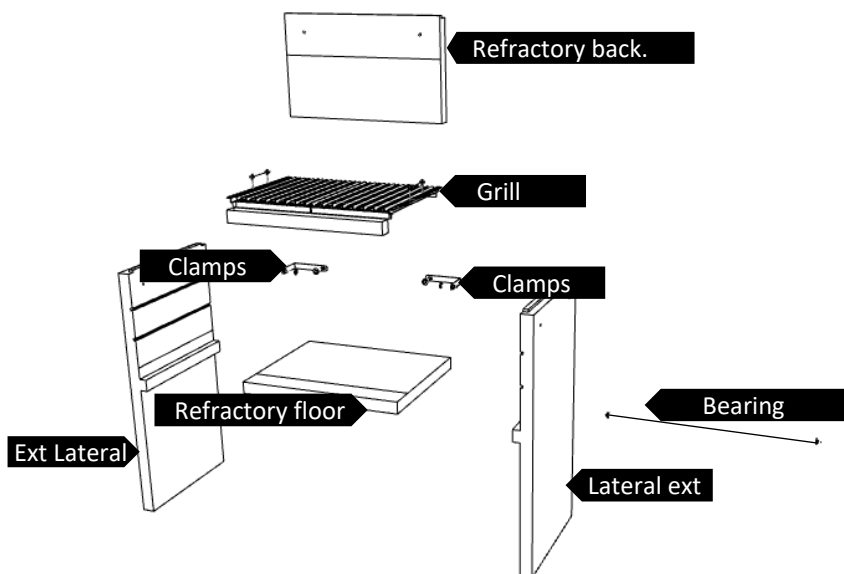


STEP BY STEP FOR INSTALLATION

CONDITIONING AND PREPARATIONS:


Clearly define the location where the grill will be installed. It must be installed on a firm and resistant floor, which does not give way due to the weight of its structure. The area where the installation is to be carried out must be clean and tidy.

STEP 1: Position external sides + floor + threaded rod, level and square the assembly. Assemble the entire assembly standing on the floor, move it closer to the wall (if there is one) and once positioned in the place to be installed, level, square and adjust the entire assembly.


Note: the stove is self-supporting, it does not require support against a wall.

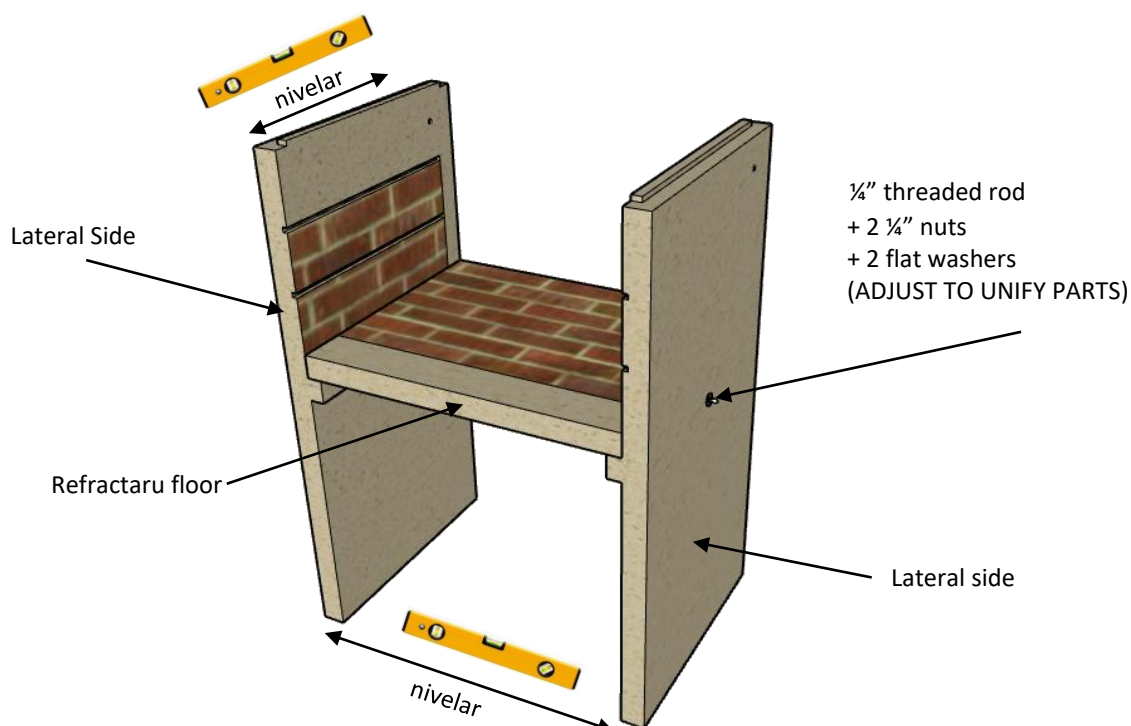

STEP 2: Place refractory back + staples + screws. Insert the refractory back from above and secure it with the metal clamps, screws, nuts and washers. Adjust the entire assembly.

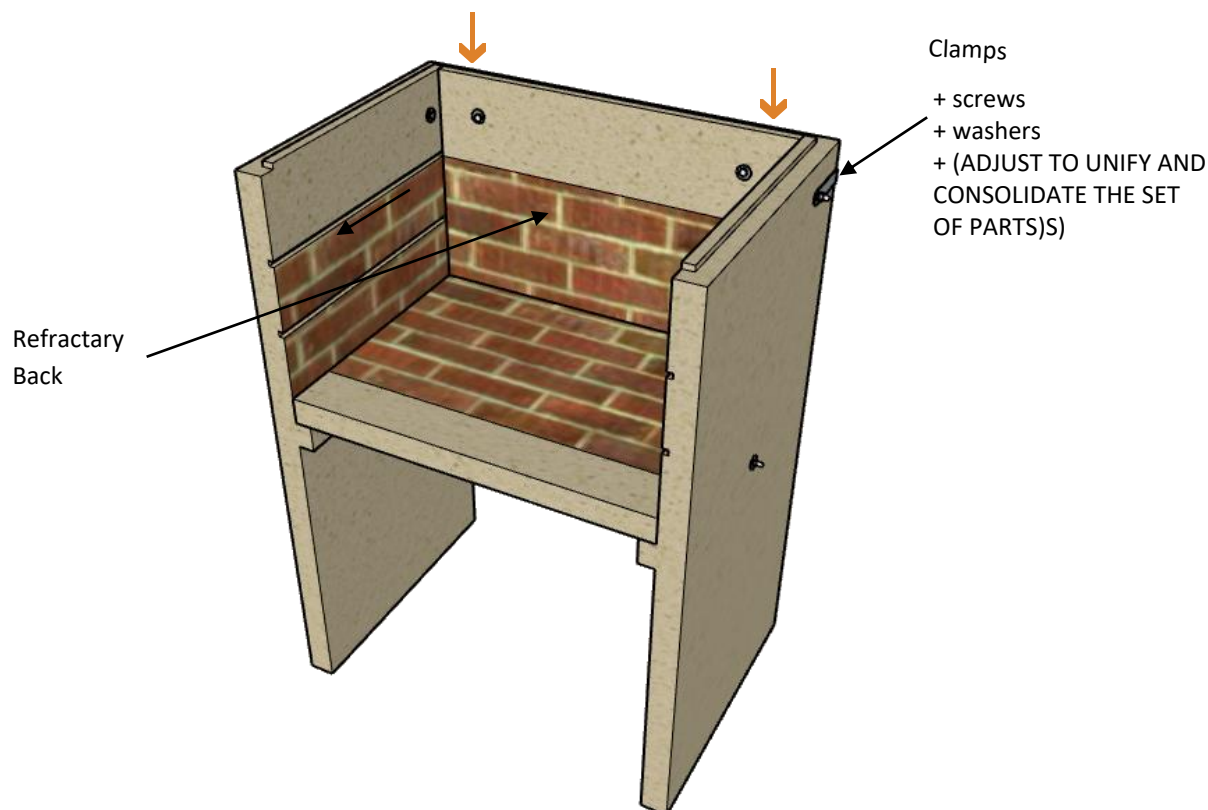

STEP 3: Place the grill: From the front of the stove, place the grill inside the upper or lower guide (according to the desired cooking level). These guides are used for both glazed and chrome-plated grill

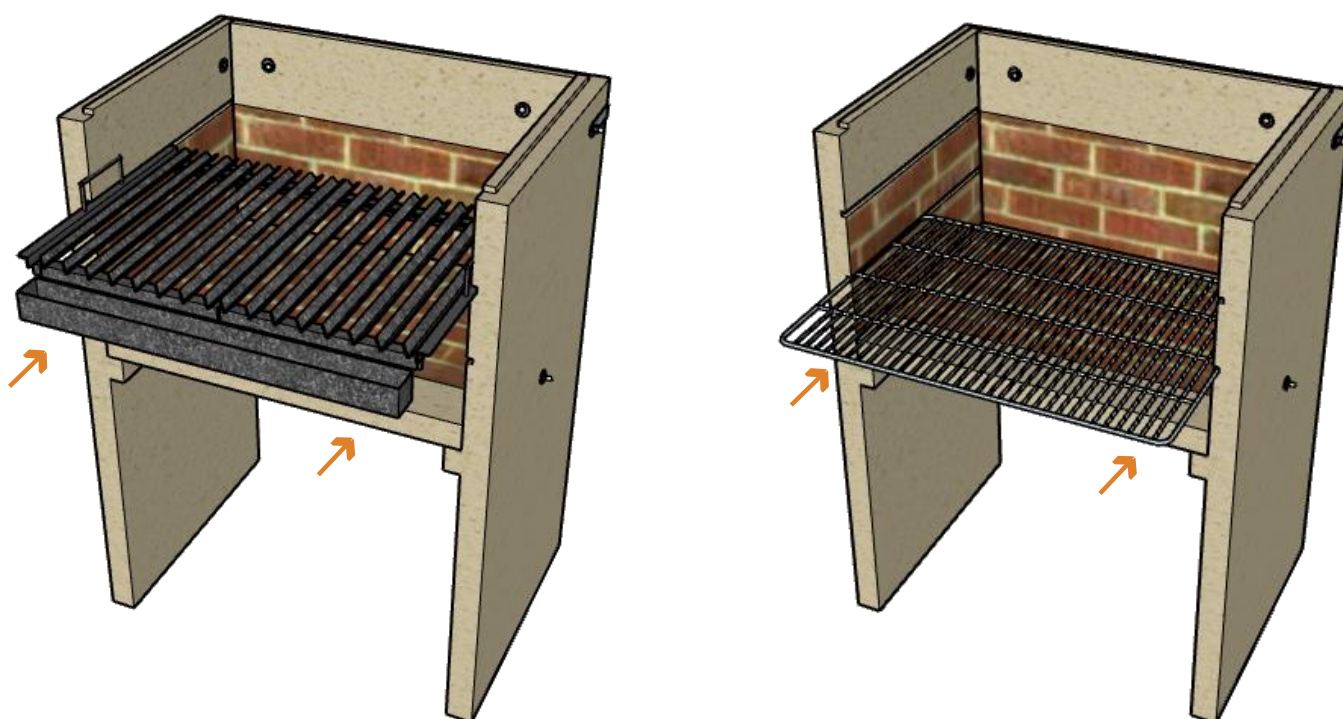



FOGON CLASICO



**CLASSIC STOVE
WITH FINISHED
ENAMELED IRON GRILL**



**CLASSIC STOVE
WITH FINISHED CHROME
GRILL**

Link to download
manual full user

