




FOGON CON CAMPANA



COMPONENTES:

- 2 Laterales externos texturados con refractarios.
- 1 Espalda refractaria.
- 1 Piso refractario.
- 1 Campana.
- 1 Prolongación de chimenea.
- 1 Sombrero.
- 1 Herraje completo (1 bastidor + 2 módulos enlozados + 1 graspera enlozada) o 1 herraje cromado completo.
- 1 Varilla roscada de $\frac{1}{4}$ " con 2 tuercas y 2 arandelas 2 Grampas metálicas con 4 tornillos de $\frac{5}{16}$ " x $2\frac{3}{4}$ ". + 4 tuercas + 4 arandelas.
- 1 Pote de texturado de 250 cc.

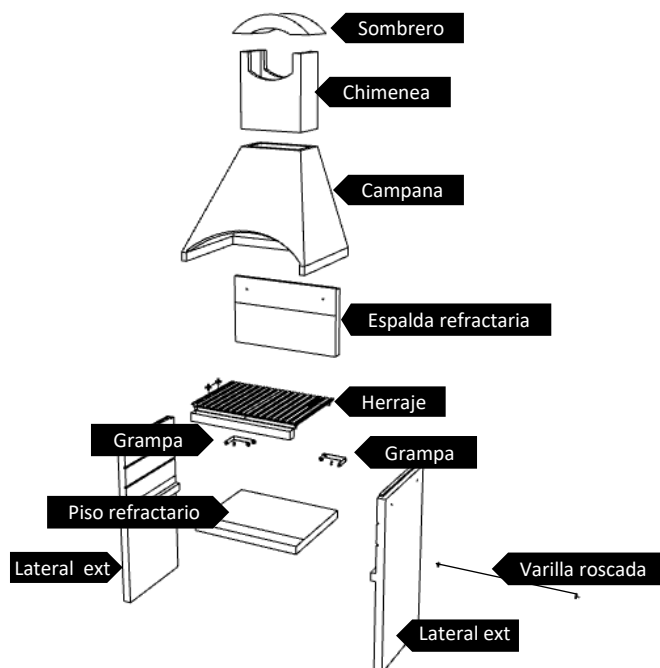


PASO A PASO PARA INSTALACIÓN:

ACONDICIONAMIENTO Y PREPARATIVOS:


Definir claramente la ubicación donde se va a instalar la parrilla. La misma se debe instalar sobre un piso firme y resistente, que no ceda por el peso de su estructura. La zona donde se va a realizar la instalación debe estar limpia y ordenada.

PASO 1 : Posicionar laterales externos + piso + varilla roscada, nivelar y escuadrar conjunto. Armar todo el conjunto parado en el piso, acercar a la pared (si la hubiera) y una vez posicionado en el lugar a instalar, nivelar, escuadrar y ajustar todo el conjunto.



Nota: el fogón es autoportante, no requiere apoyo contra una pared.

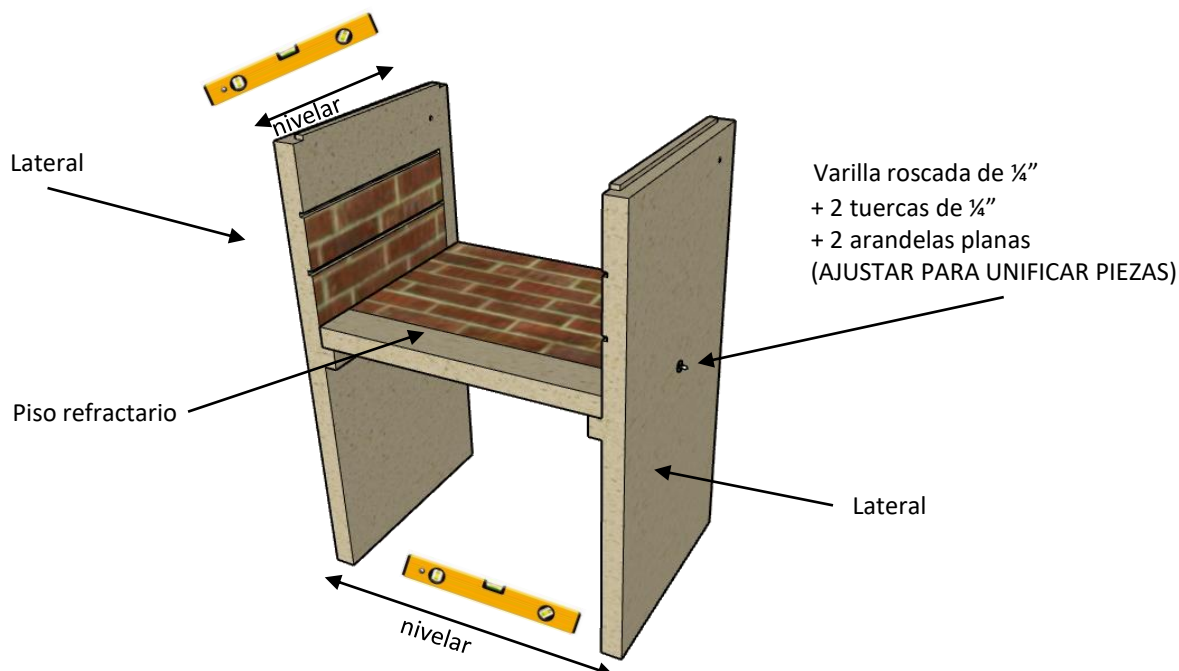


PASO 2: Colocar espalda refractaria + grampas + tornillos. Insertar la espalda refractaria desde arriba y sujetarla con las grampas metálicas, los tornillos, tuercas y arandelas. Ajustar todo el conjunto.

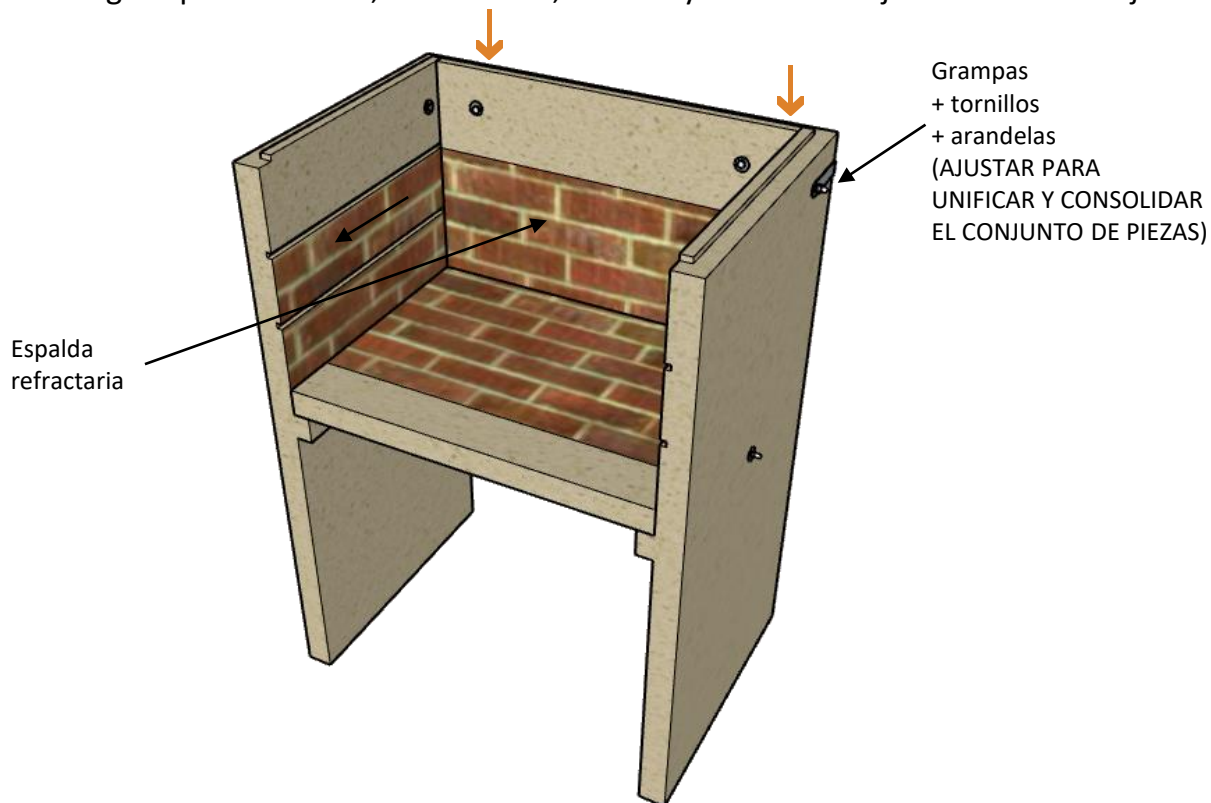


PASO 3 : Colocar herraje. Desde el frente del fogón, colocar el herraje dentro de la guía superior o inferior (de acuerdo al nivel de cocción deseado). Estas guías sirven tanto para el herraje enlozado como para el cromado.

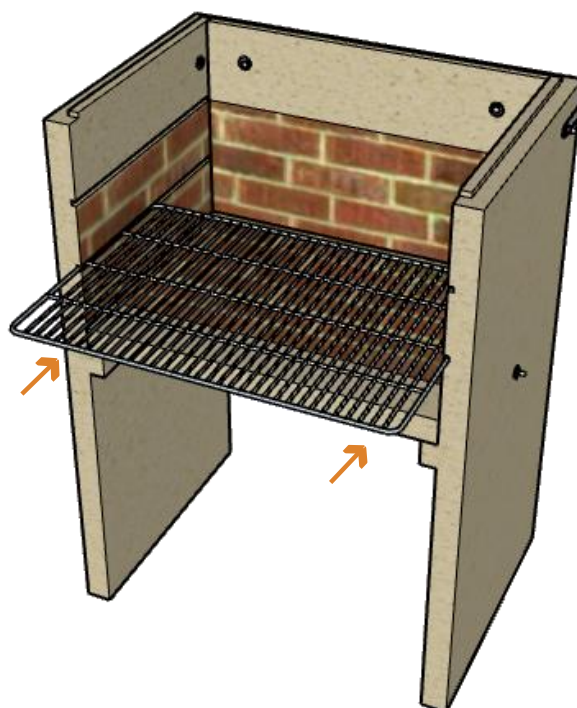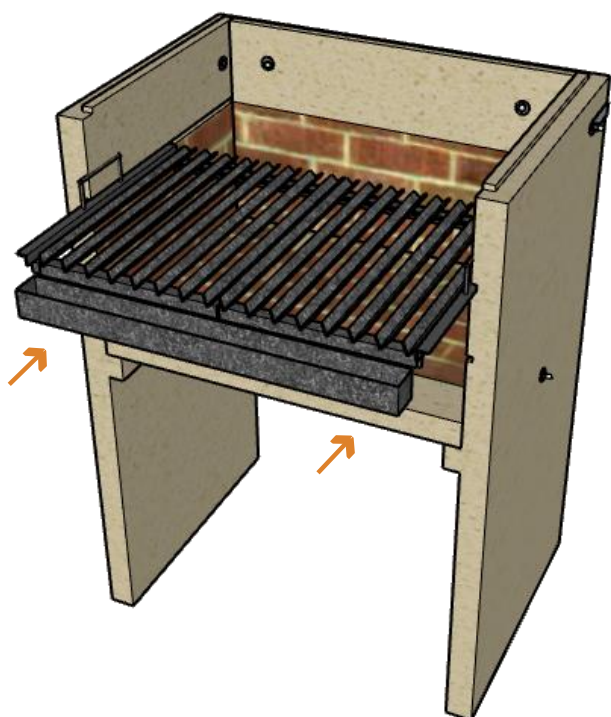

PASO 4 : Colocar campana + chimenea + sombrero. Calzar la campana a filo de los laterales. Montar la chimenea a filo de la boca superior de la campana y centrar el sombrero entre las patas de la chimenea.

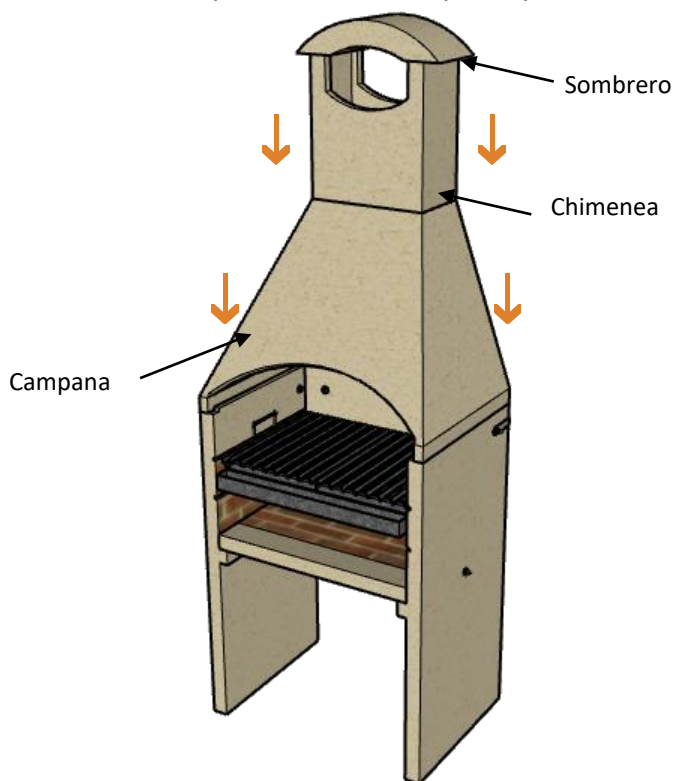

PASO 5 : Sellado. Con el material texturado provisto en el pote, sellar con espátula la unión entre las piezas de hormigon y reparar la superficie o cantos que se pudieron haber dañado durante el armado.

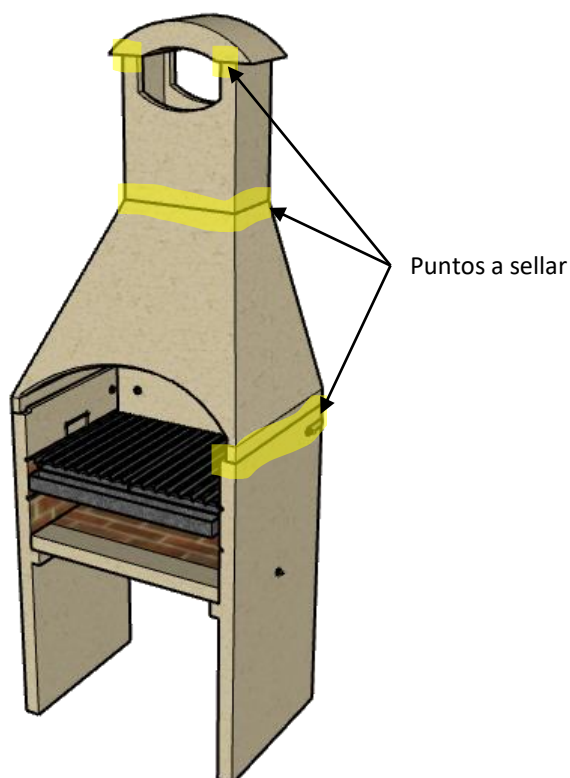




FOGON CON CAMPANA



PARRICAMP

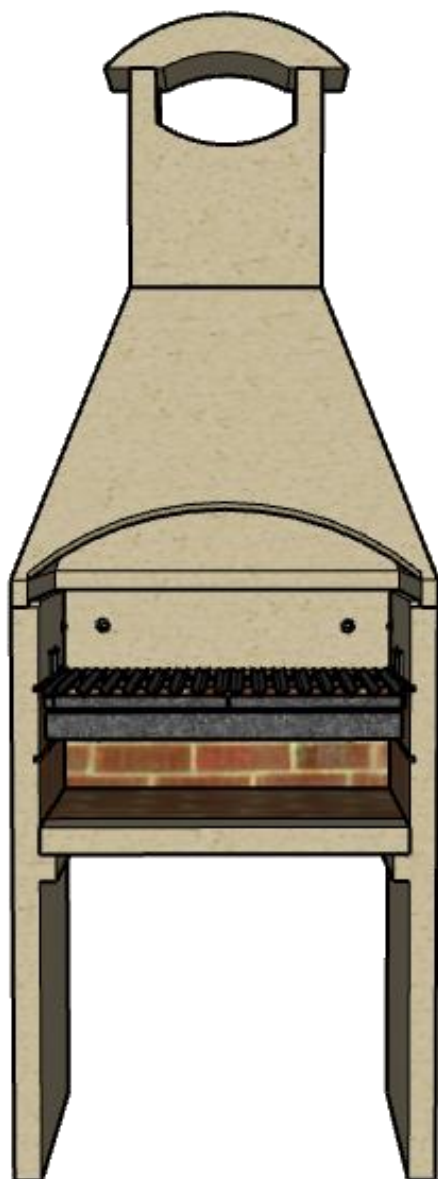

FOGON CON CAMPANA
CON HERRAJE ENLOZADO
TERMINADO



FOGON CON CAMPANA
CON HERRAJE CROMADO
TERMINADO

Enlace para descarga
de manual del
usuario completo






FOGON CON CAMPANA



COMPONENTS:

- 2 External sides textured with refractory
- 1 Refractory back.
- 1 Refractory floor.
- 1 Chrome grill or angle laminated sheet metal fittings (as appropriate).
- 1 Chimney hood.
- 1 Chimney extension.
- 1 Cooker hood.
- 2 Upper clamps.
- 4 Screws with nuts and washers.
- 1 threaded rod with 1/4" nuts and washers.

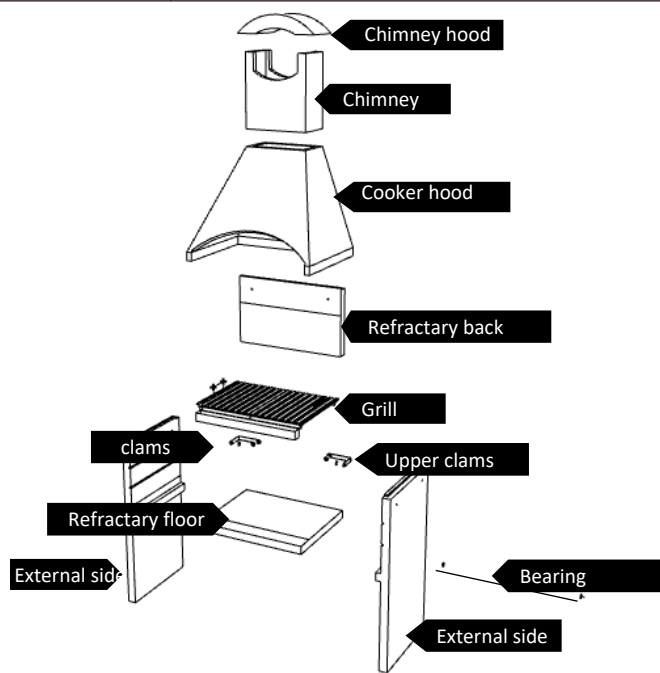


STEP BY STEP FOR INSTALLATION

CONDITIONING AND PREPARATIONS:

Clearly define the location where the grill will be installed. It must be installed on a firm and resistant floor, which does not give way due to the weight of its structure. The area where the installation is to be carried out must be clean and tidy.

STEP 1: Position external sides + floor + threaded rod, level and square the assembly. Assemble the entire assembly standing on the floor, move it closer to the wall (if there is one) and once positioned in the place to be installed, level, square and adjust the entire assembly.

Note: The stove is self-supporting, it does not require support against a wall.

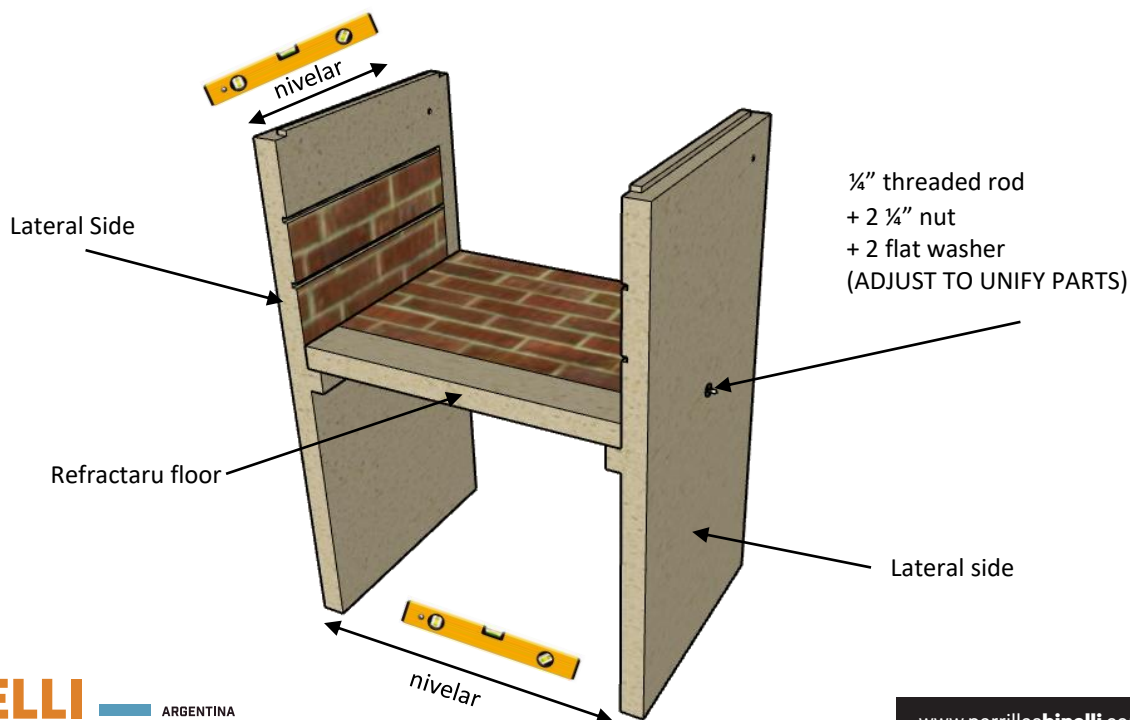






FOGON CON CAMPANA




STEP 2: Place refractory back + staples + screws. Insert the refractory back from above and secure it with the metal clamps, screws, nuts and washers. Adjust the entire assembly.

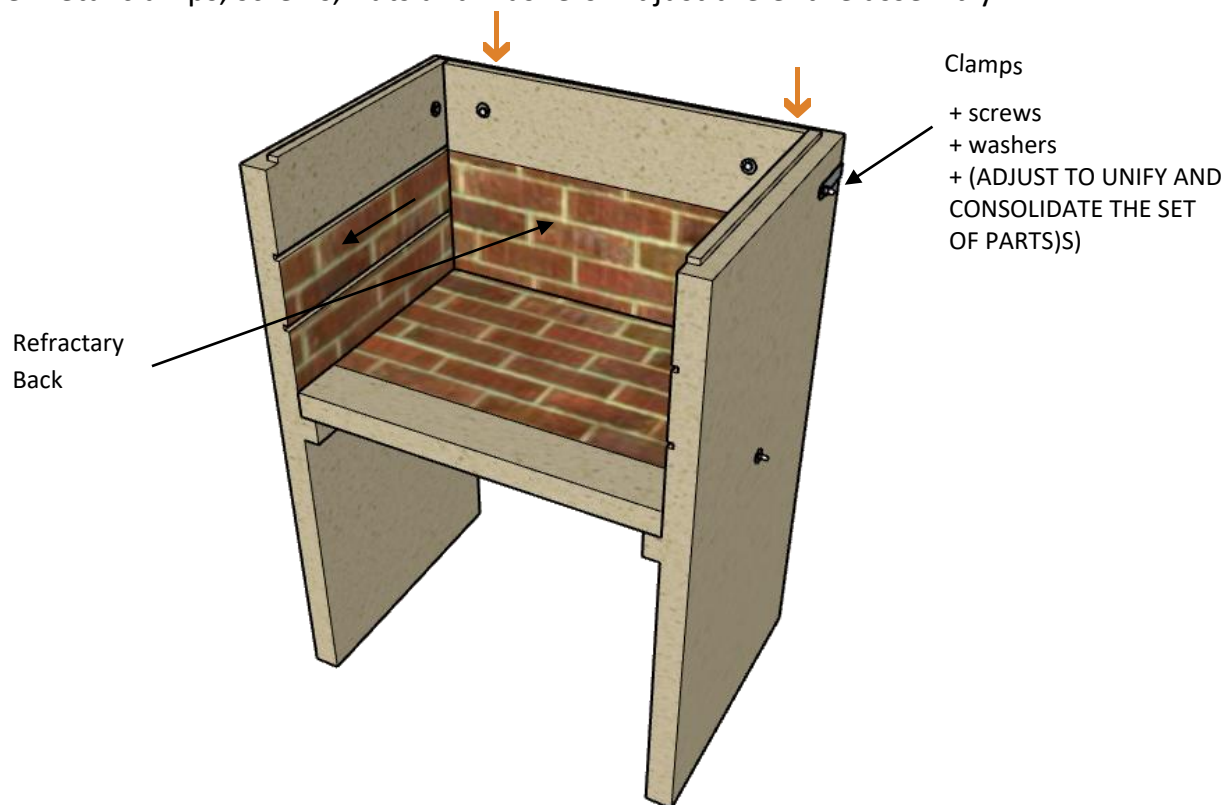


STEP 3: Place the grill: From the front of the stove, place the grill inside the upper or lower guide (according to the desired cooking level). These guides are used for both glazed and chrome-plated grill

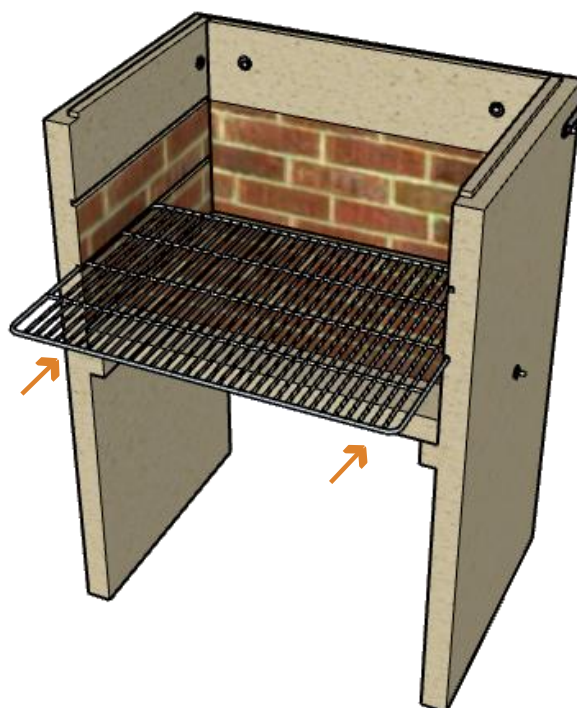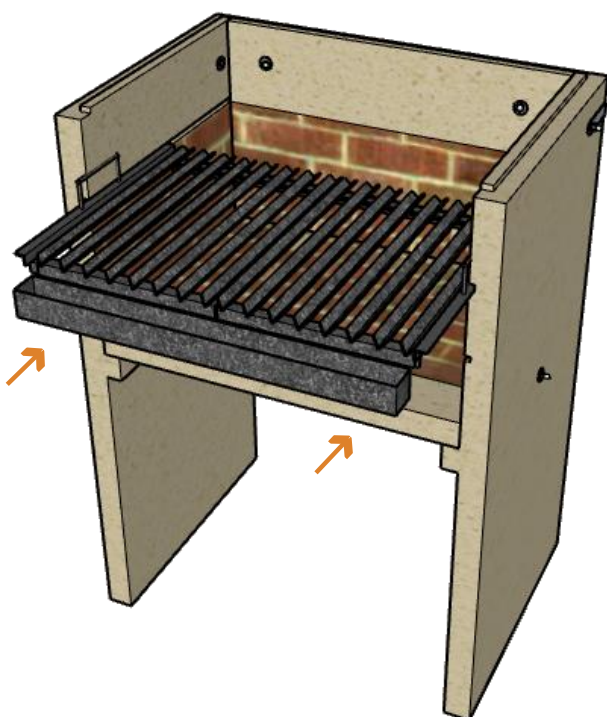

STEP 4: Place hood + chimney + hat. Fit the bell on the edge of the sides. Mount the chimney on the edge of the upper mouth of the hood and center the hat between the legs of the chimney.

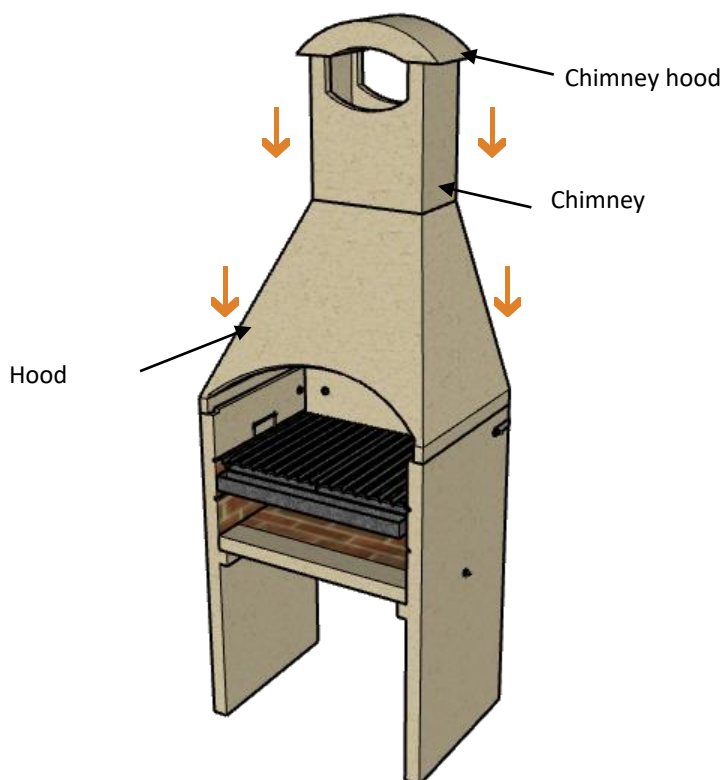


STEP 5: Sealing. With the textured material provided in the pot, seal the joint between the concrete pieces with a spatula and repair the surface or edges that may have been damaged during assembly.

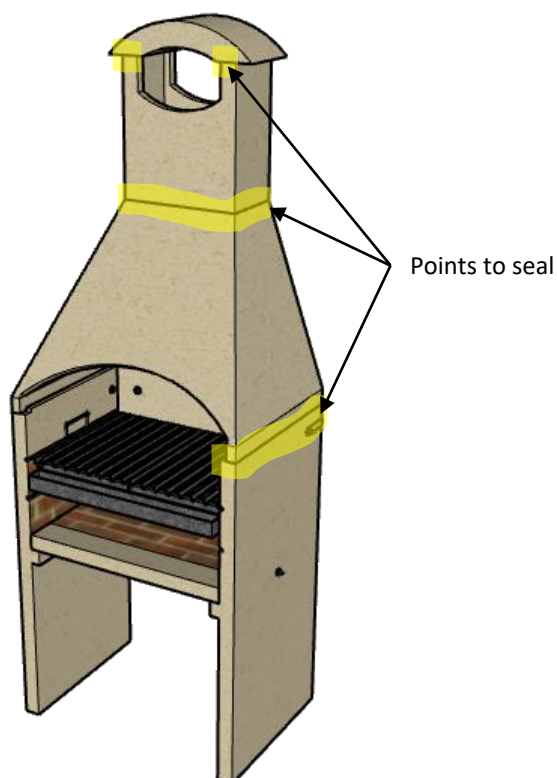




FOGON CON CAMPANA

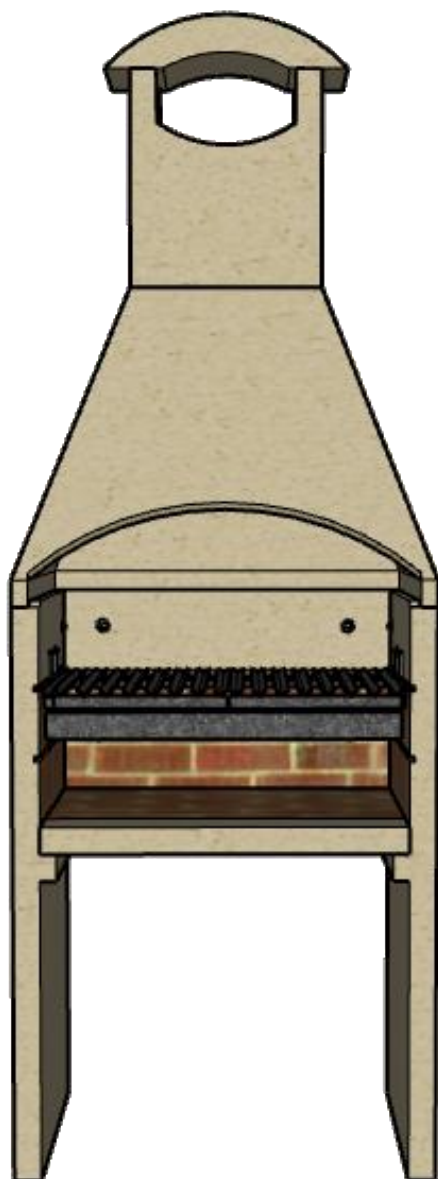

STOVE WITH HOOD WITH
FINISHED ENAMELED
IRON GRILL

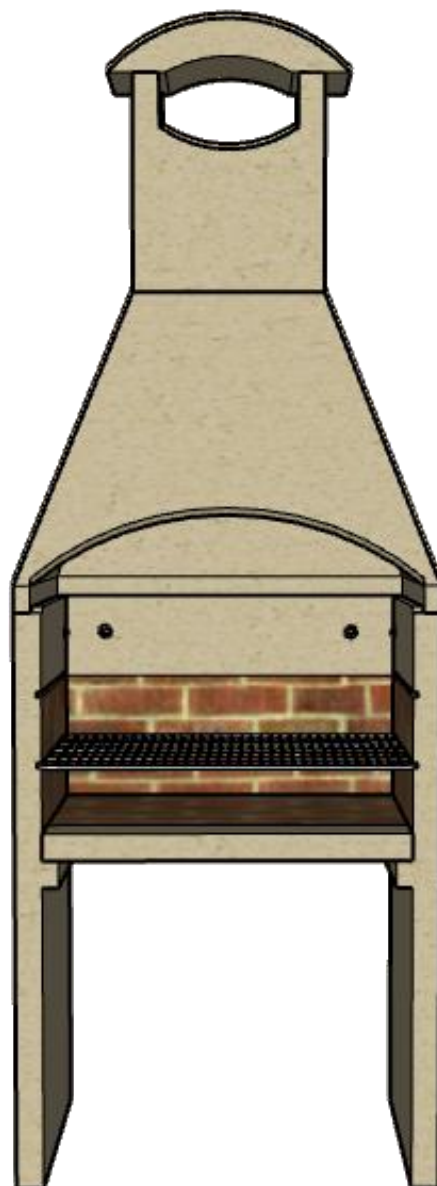

STOVE WITH HOOD
WITH FINISHED CHROME
GRILL

Link to download
manual full user

